



Thank you for purchasing a Project:Custom resin cast Famous Covers Head!

Resin Cast Head


- Please read all of the instructions carefully before proceeding.
- If there are any problems with the Krazy Glue, please **do not force the part!** Krazy Glue can be dissolved with nail polish remover if an accident occurs.
- Please use caution with the equipment described in these instructions as they can cause injury.
- If there are any questions, please email me at vcallag@home.com or visit www.projectcustom.com

Assembly Instructions




Required Tools

- Krazy Glue
- X-acto knife
- Flat head wire cutters
- Nail polish remover
- Paper Towel

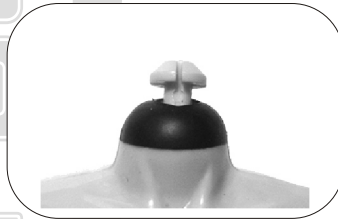


Step 1 - Remove head from figure using the "Boil & Pop" method. Please see the Project:Custom website for more details

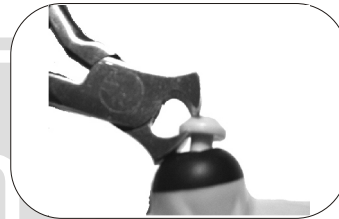


Step 2 - Remove "mushroom cap" off neck post by cutting off the overhang with the wire cutters.



WARNING! - Do not cut off complete "mushroom cap"! This will leave very little neck post left to work with & may compromise proper head attachment,

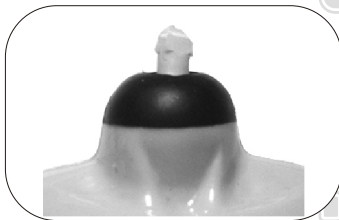


Proper removal should leave you with a neck post similar to this.

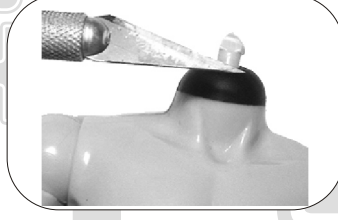

Step 3 - Using your X-acto knife, remove any excess plastic to smooth out the neck. Cut away from the neck to ensure that it is not accidentally damaged.




Step 4 - Due to the weight of the resin cast, the neck joint must be stiffened to ensure that the head can be posed. Add 2 drops of Krazy glue to the neck joint.

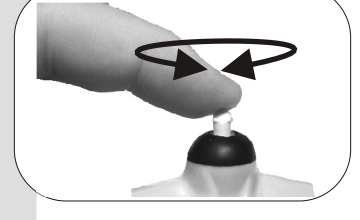


Step 5 - Rotate the neck joint while the glue hardens. **You must continuously rotate the joint or it will lock into place!** The joint must be stiff enough to be moved if gently pushed into position. Add more glue if needed.




Step 6 - Once the neck post has been prepared, apply Krazy Glue to the inside of the resin head. Make sure that all of the insides of the slot have been covered, and that all excess is wiped off the recessed bottom of the head.

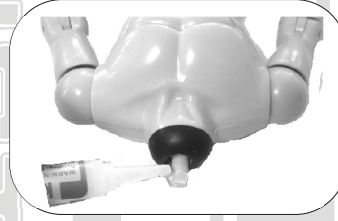

Step 7 - Holding the figure upside down, apply Krazy Glue to the neck post. This is to prevent additional glue getting into the neck joint & locking it.

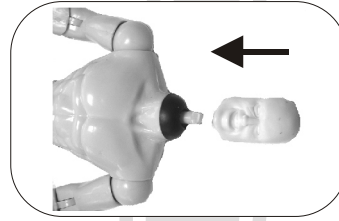

Step 8 - Gently slide resin cast head onto neck post.

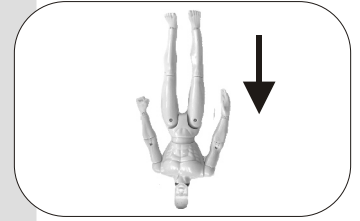

Step 9 - Prop both figure & head upside down on a flat surface for 20 min. while the glue hardens. This will protect the neck joint again from becoming fused by spillage.