




# Resin Cast Hand

Thank you for purchasing a Project:Custom resin cast Famous Covers replacement hand!


- Please read all of the instructions carefully before proceeding.
- If there are any problems with the Krazy Glue, please **do not force the part!** Krazy Glue can be dissolved with nail polish remover if an accident occurs.
- Please use caution with the equipment described in these instructions as they can cause injury.
- If there are any questions, please email me at [vcallag@home.com](mailto:vcallag@home.com) or visit [www.projectcustom.com](http://www.projectcustom.com)

## Assembly Instructions

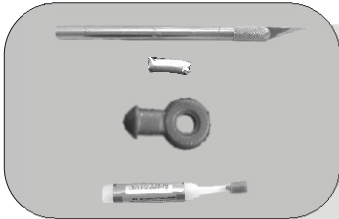


### Required Tools


- Krazy Glue
- X-acto knife
- M1/M2 wrist hinge post (supplied)
- M1/M2 wrist post
- Paper Towel

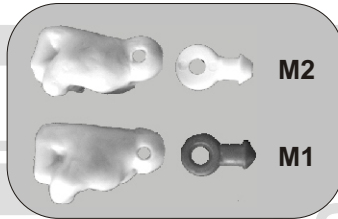


**Please Note** - There are differences in the size of both the M1 & M2 wrist sizes. Please ensure that you use the proper wrist post with the replacement hand.

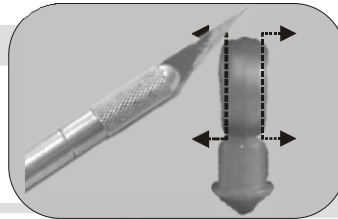


**Step 1** - Trim the sides of the wrist post off to accommodate the tighter fit. This will ensure that the hand can be posed properly.

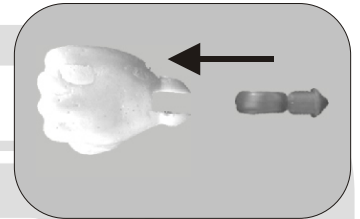


**Step 2** - Slide the wrist post into the hand socket until the holes are aligned.

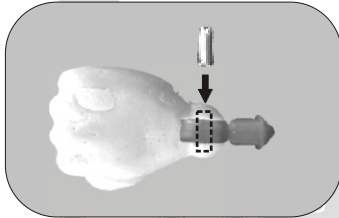


**Step 3** - Push the supplied wrist hinge post into the aligned holes until it is centered in the wrist hinge.

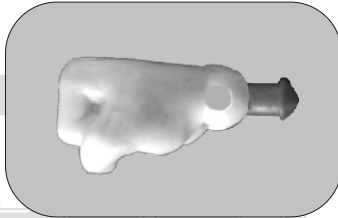

**Step 4** - Using a sculpting material of your choice, plug the holes on both sides to lock the wrist hinge in place. Cure normally as the resin can also be baked.

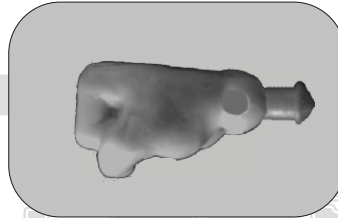

**Step 5** - Once curing is completed, prime & paint as usual.

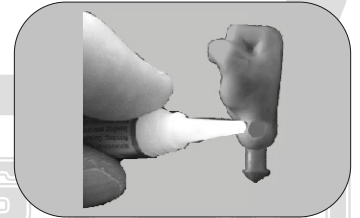

**Step 6** - Once paint is dry, add some Krazy glue on the painted wrist joint surface. This will prevent the paint flaking off during movement. **Caution!** - Do not allow Krazy glue into the wrist joint as it may lock it into place permanently.

Remove & reattach Famous Cover hands using the standard “Boil & Pop” method described at [www.projectcustom.com](http://www.projectcustom.com)